




# Skirt Latch Installation Instructions

To install a skirt latch on your spa's redwood skirt equipment door, follow the instructions below for the appropriate kind of skirt.




## Vertical Slat Skirt:

(See side 2 of this sheet for Framed Skirts with Corner Posts)

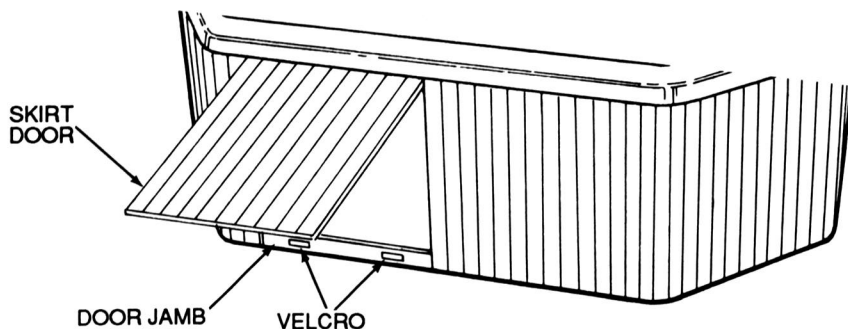


### VERTICAL SLAT SKIRT

1. Remove existing velcro from the door jamb and the skirt door.
2. Center the nut bracket on top of the door jamb in the center of the door opening and in a location that corresponds with the center of a vertical slat in the skirt door. Set it 1/4" back from the front of the door jamb. (See Illustration A.) Secure the bracket with the two wood screws provided.
3. Insert the knurled head screw into the back of the nut bracket far enough to make a mark on the back side of the skirt door when the door is closed. Close and mark the skirt door. (See Illustration B.)
4. Open the skirt door and drill a 1/4" dia. hole through the skirt door in the location marked on the back of the skirt panel.
5. Remove the knurled screw from the back side of the nut bracket and insert it through the skirt door from the front side and secure it in place with the retainer shown in Illustration C.
6. After closing the door, it can be fastened in place by turning the knurled screws clockwise. **Hand-tighten only.** Door may warp if over-tightened with a screw-driver or other tool.

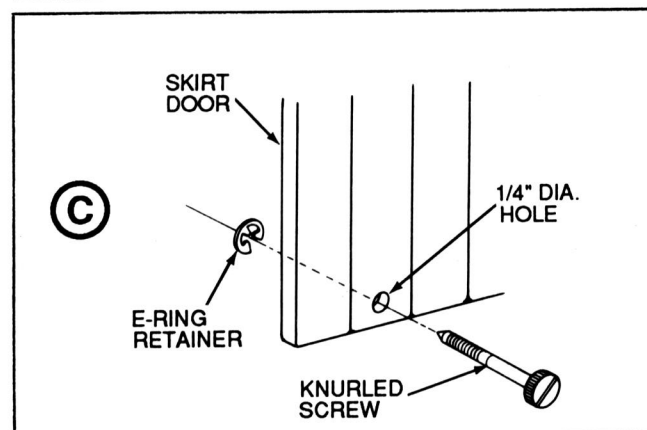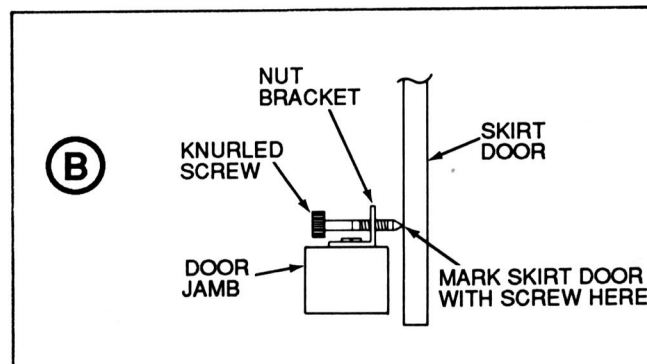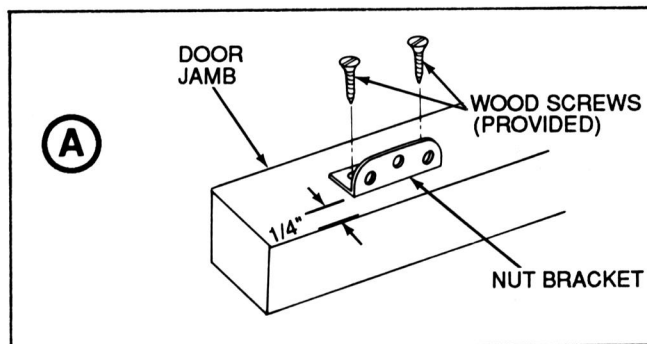

# Framed Skirts with Corner Posts

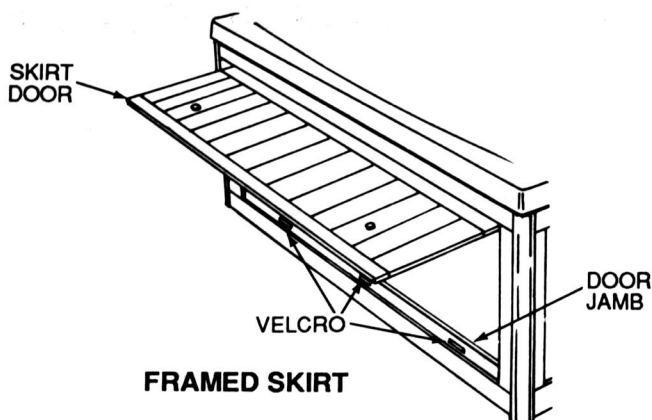

**FRAMED SKIRT**

1. Remove the existing velcro from door jamb and skirt door.
2. Temporarily set the nut bracket on the door jamb edge, in the center of the door jamb, as shown in Illustration D. (If two skirt latches are required, locate them so that spaces between them and the ends of the door jamb are equidistant.) Mark the centers in all bracket holes.
3. Remove the bracket(s) and drill a 1/4" dia. hole through the door jamb, ensuring that it is perpendicular to the skirt door. (Drill two holes if installing two brackets.)
4. Set bracket(s) back in place and secure with screws provided.
5. Insert knurled head screw into the back of the nut brackets far enough to make a mark on the back of the skirt when the skirt door is closed. Close and mark the skirt door. (See Illustration E.)
6. Open the skirt door and drill 1/4" dia. holes through the skirt door in location(s) marked on the back of the skirt door, ensuring that the hole is perpendicular to the skirt door.
7. Remove the knurled screw from the back side of the nut bracket and insert it through the skirt door from the front side; secure it with the retainer. (See Illustration F.)
8. After closing the door, it can be fastened in place by turning the knurled screws clockwise. **Hand-tighten only.** Door may warp if over-tightened with a screwdriver or other tool.

