



ADDENDUM

FOR BATHS WITH FAUCET OUTLETS BELOW BATH RIM

(SUPERSEDES INSTALLATION INSTRUCTIONS)


Important Shower Information

Because of the bath's unique contour design, a rigid shower door cannot be readily installed. A hand-held shower is factory installed on the Fontana. A shower curtain may be installed, which would allow the user to keep the spray contained within the bath interior.

NOTE: Proper installation of a shower is the responsibility of the installer. Jacuzzi Whirlpool Bath is not responsible for damage to the unit or for water damage which might occur due to its installation.

Plumbing Codes require faucet outlets to be 1 inch above the bath rim surface. If the outlet is below one inch, local inspectors will require the installation of an anti-siphon valve. The valve should be located a minimum of 6 inches above the bath rim surface. The valve must be exposed and have access for service. The exposed air vent of the valve should be placed over a waterproof surface or fixture to allow for any possible water leakage from the valve air vent.

WATER SUPPLY CONNECTIONS WITH HAND HELD SHOWER

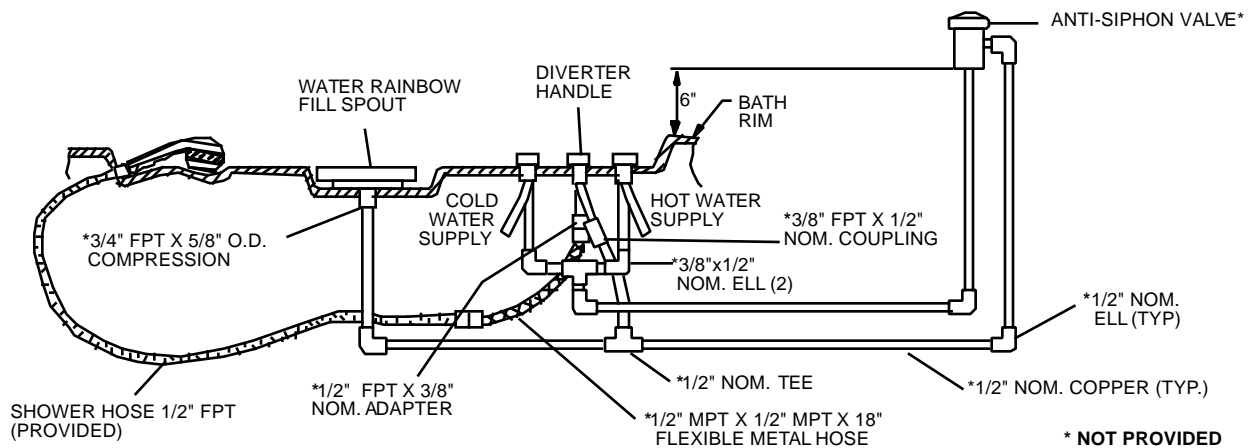

WATER SUPPLY CONNECTIONS WITHOUT HAND HELD SHOWER

